

## SPARE PARTS EXPLODED VIEW STORAGE ELECTRIC WATER HEATERS Model

NTS 2K

R8215496-01EN - Edition 01 - 11/07/2006

870 002		NTS 80 TD 2K		
870 003		NTS 80 TS 2K		
870 004 870 005		NTS 100 TD 2K NTS 100 TS 2K		
350 5000 350 5005		NTS 120 2K NTS 120 R 2K		
Reference	Ind.	Model type	Begin	End

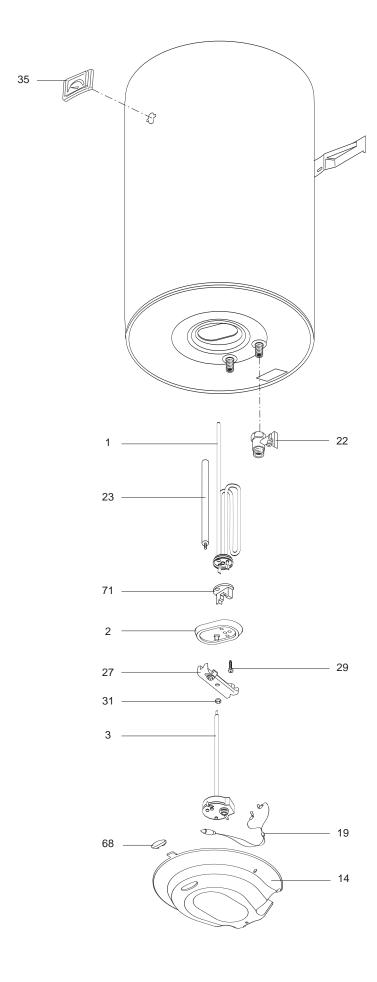

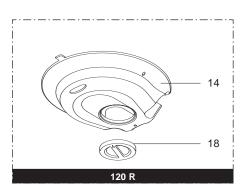

							/	///		7	
					,	<i>&amp;</i> /	// <u>\$</u> /\$				
					7,	γ,		~/			
Key N	Description	Manf. Pt. N Other	Type	4	4	4	R	(	/ Man	f. date to	
0001	ELEMENT 2000W 230V	993209		•	•	•	•		110111	/ 10	
0002	FLANGE WITH GASKET	993012		•	•	•	•				
I	THERMOSTAT	691214		•	•						
	THERMOSTAT	691217					•				
	THERMOSTAT PLASTIC COVER	65101936				•				11/04	
	PLASTIC COVER PLASTIC COVER	570330 571765		•	•	•	•			01/05	
	PLASTIC COVER	65102554					•		02/05	01/03	
	PLASTIC COVER	65102556		•	•	•			12/04		
	CONTROL KNOB	65102555					•		02/05		
	CONTROL KNOB	993171					•			01/05	
	SIGNAL LAMP	993025		•	•	•	•				
	SAFETY VALVE	571730		•	•	•	•				
	MAGNESIUM ANODE D:21,5 L:230 M5	993014		•	•	•	•				
	FLANGE BRACKET	65104106		•	•				06/06	05/00	
	FLANGE BRACKET FLANGE BRACKET	993011 993011		•	•	•	•			05/06	
	SCREW M6X12	993000		•	•	•	•				
	HEXAGONAL NUT	570127		•	•	•	•				
		573427		•	•	•	•				
	SIGNAL LAMP CAP	571767		•	•	•	•		12/04		
0071	TERMINAL SHIELD (GREEN)	993003		•	•	•	•				
		<u> </u>									

## LIST OF THE ABBREVATIONS

HW ..... : Hot water. CW ..... : Cold water. : Ceramic resistance (normal heating). : Ceramic resistance (accelerated heating) TP ..... : Immersion heater. 1F ..... : With fittings. 2F ..... : Without fittings. 3F ..... With fittings and another outlet connection. AMI ..... : With mixing valve. SMI ..... : Without mixing valve. PUISS ..... : Power of th appliance. PN ..... : Appliance with normal pression. LP ..... : Appliance with low pression. PV ..... : Appliance with variable power. : Appliance with fixed power..

## **IDENTIFICATION PLATE**

## SERIAL NUMBER

